



Technical Datasheet

Inline Blower

Specifications:

Equipment Size (cm):
H 42 x W 35 x L 35

Equipment Weight (kg):
16

Shipping Type:
Flightcase or similar
Contact MTFX

Shipping Size (cm):
Contact MTFX

Shipping Weight (kg):
Contact MTFX

Power Requirements:
Connector: 16A
Voltage: 240v
Peak Amps: TBC
Running Amps: TBC

Noise: 75db at 3mtrs

Wind Speeds:
1mtrs: 15mph
5mtrs: 7.5mph
10mtrs: 2.8mph

Suggested for set up
1 Person

The Inline Blower is a compact but effective Wind Machine, which can also be used to extract air. Powered with a 16A connector and operated with simple controls.

How to set up and use the Inline Blower

1. Plug in the power supply
2. Switch the unit on
3. To switch between blow/suck simply turn the unit around to achieve desired effect
4. On request an optional 4mtr hose can be supplied

Hints/Tips/Safety:

If smoke or debris are to be used in this effect. Always keep it in front of the blades. Taking it behind the fan risks injury or damage

Keep hands, hair, and all loose objects away from the fan blades. Secure of all loose objects and clothing.



Fig 2. On/off switch



Fig 3. Optional hose



Fig 1. Inline Blower