



# Technical Datasheet

## Triple Shot Confetti Gun

The Triple Shot Confetti Gun can be loaded with up to 3 disposable confetti (or streamer) cannons and fired either individually or as a simultaneous triple-shot. The confetti or streamers can reach distances of up to 20 metres.



Fig 1. Front view



Fig 2. Side view



Fig 3. Charger socket



Fig 4. Loaded cannons



Fig 5. Cannons plugged in

### Specifications:

Length: 47cm

Height: 26cm

Width: 13cm

Shipping size:  
53 x 40 x 20cm

Equipment weight: 5kg

Shipping weight: 9kg

Power connector: 13A

Decibels: 100db

Suggested for set up:  
1 person

Duration of effect:  
Up to 20 seconds

Approx. height of effect:  
Up to 20 metres  
depending on cannon  
size and fill type

Additional requirements:  
Disposable electric  
confetti cannons

### How to set up and fire a Triple Shot Confetti Gun

1. Charge the unit by connecting the supplied power cable into the blue input (fig 3) and a mains supply.
2. When charged, ensure the unit is switched off and insert either one, two or three disposable electric confetti cannons into the gun barrels (fig 4), feed the wire through the groove in the barrel and secure using the thumb screws.
3. Plug the cannon wires into the sockets (fig 5).
4. Ensure the safety (fig 6) is **on** (if the safety is protruding from the right hand side as you hold the gun the safety is on. If protruding on the left hand side the safety is off and the gun is live).
5. Remove the top seal or cap from each cannon.
6. Switch on the unit on.
7. Select between single shot or full shot (fig 7).
8. Check that the area is safe, switch off the safety and pull the trigger to fire.

### Hints / tips / safety

- Do not aim directly at people.
- If using in single shot mode the gun will fire in the following sequence; left → middle → right (from the operators perspective).
- The gun features a laser 'sight' (fig 8) which can be turned on with a switch. This is a novelty feature and does not improve aim accuracy in any way! Do not point the laser at peoples eyes.
- Each cannon can only be used once. Do not attempt to refill a used cannon.
- The cannon is supplied with a shoulder strap (fig 9) but there is no requirement for this to be used.
- When fired the gun sounds very similar to a shotgun - be aware if small children or animals are nearby.



Fig 9. Shoulder strap

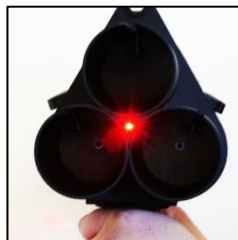


Fig 8. Laser sight



Fig 7. Single / full shot selector



Fig 6. Safety button